
Chrysler PT Cruiser
Rok prod. od 04.2005

Zestaw śrubowy:
M12x70-8.8 2 szt.
M12x40-8.8 8 szt.
M10x35-10.9 8 szt.
Podkładki powiększone:
Ø12.5xØ35x3 4 szt.
Ø10.5xØ30x3 8 szt.
Podkładki:
Ø13 2 szt.
Podkładki sprężyste;
Ø12.2 8 szt.
Ø10.2 8 szt.
Nakrętki
M12-8 8 szt.

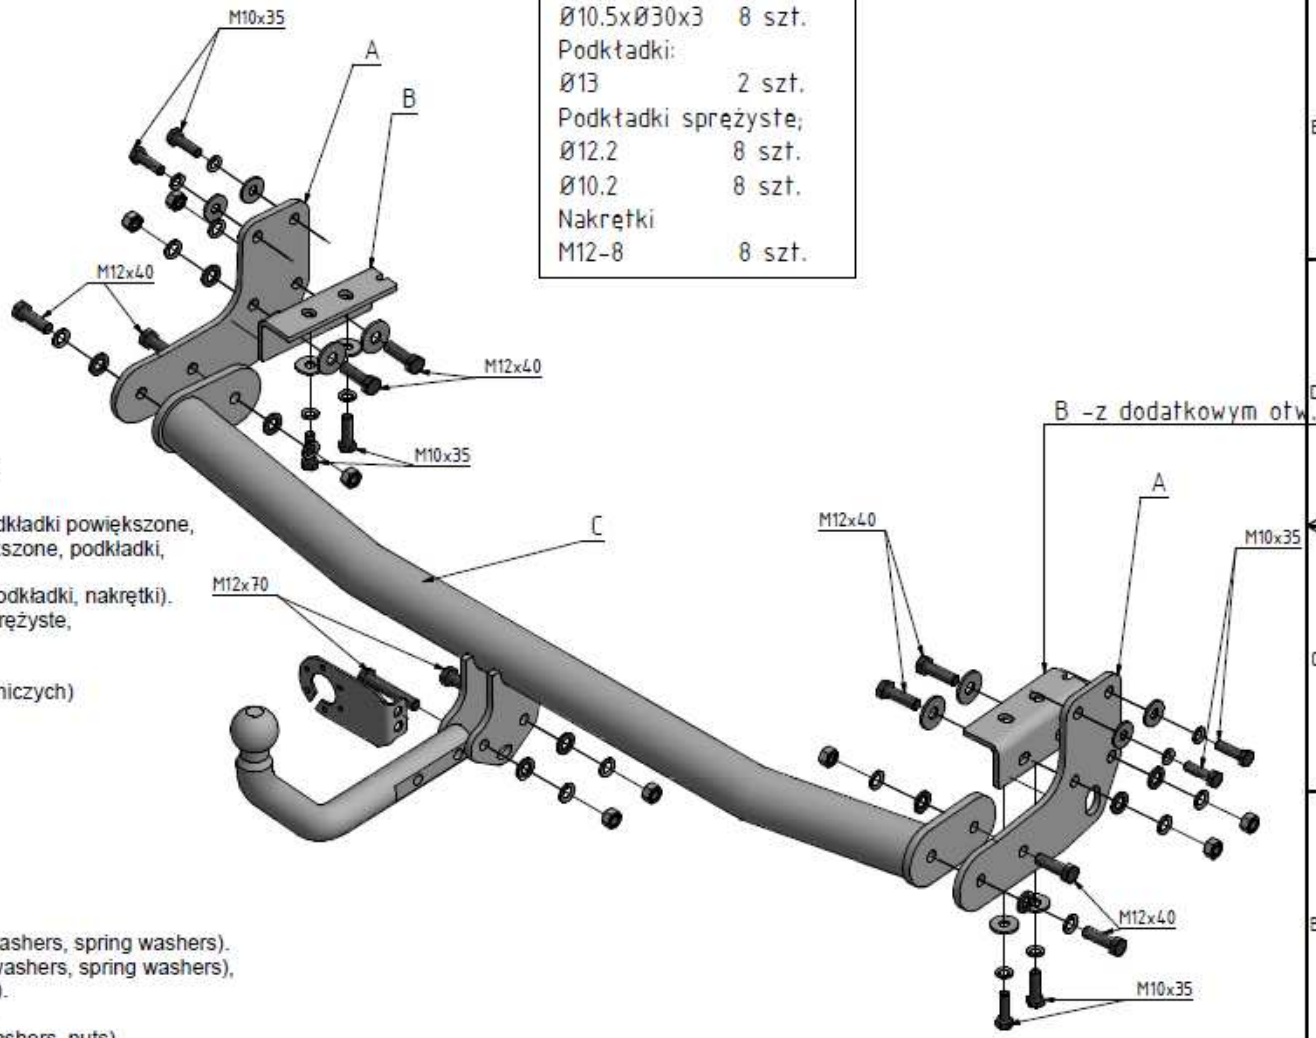

Instrukcja montażu:
1. Wyjąć koło zapasowe.
2. Zdjąć tylny tłumnik.
3. Zdemontować oba uszy holownicze - nie będą już potrzebne.
4. Wykonać wycięcie w zderzaku w osi na kulę.
5. Mocować luźno blachy A do zewnętrznych części wsporników za pomocą śrub M10x35 (podkładki powiększone, podkł. sprężyste).
6. Luźno mocować kątowniki B do dolnej części wsporników za pomocą śrub M10x35 (podkładki powiększone, podkładki sprężyste) a następnie do blach A za pomocą śrub M12x40 (podkładki powiększone, podkładki, podkł. sprężyste, nakrętki).
7. Przykręcić belkę główną C do blach A za pomocą śrub M12x40 (podkładki sprężyste, podkładki, nakrętki).
8. Przykręcić kulę i blachę gniazdka elektrycznego za pomocą śrub M12x70 (podkładki sprężyste, podkładki, nakrętki).
9. Przykręcić wszystkie śruby momentami wg tabeli.
10. Zamontować wszystkie części samochodu zdemontowane wcześniej (bez uszy holowniczych)
11. Podłączyć instalację elektryczną wg instrukcji fabrycznej samochodu.

Fitting instructions:
1. Remove the spare wheal.
2. Unhook the rear exhaust muffler.
3. Dismount both towing rings (they will be no longer used).
4. Cut out the bumper in axle on the feet of the ball.
5. Loosely fix the plates A to the external side of the frame using bolts M10x35 (special washers, spring washers).
6. loosely fix the anglebars B to the lower side of the frame using bolts M10x35 (special washers, spring washers), then to the plates A with bolts M12x40 (special washers, spring washers, washers, nuts).
7. Fix the main bar C to the plates A with bolts M12x40 (spring washers, washers, nuts).
8. Attach the ball and electrical plate to the corps using bolts M12x70 (spring washers, washers, nuts).
9. Tighten all the bolts according to the torque setting-see the table.
10. Remount all the removed parts onto the car (except for the towing rings).
11. Connect the electric wires according to the instructions of the car.

Momenty przykręcenia śrub i nakrętek:
Torque settings for bolts and nuts:
M12 (8.8) - 79 Nm M10 (10.9) - 68 N

Instrukcja montażu