Fiat Stilo kombi
rok prod: 11.2002-2008

bizub

Zestaw śrubowy:

Śruby:

M12x35-8.8	- 4 szt.
M12X70-8.8	- 2 szt.

Podkładki:

ϕ10,5	- 6 szt.
ϕ10,5xϕ30	- 2 szt.
ϕ13	- 6 szt.

Sprężynówki:

ϕ10,2	- 6 szt.
ϕ12,2	- 6 szt.

Nakrętki:

M12-8	- 4 szt.
M10-8	- 6 szt.

Śruba (2 śrub.) na patyku - 2 szt.


Śruba (1 śrub.) na patyku - 2 szt.

Instrukcja montażu:
(Demontaż i podcinanie zderzaka)

1. Wymontować zderzak i belkę zderzeniową.
2. Usunąć zaślepki otworów pod śruby z boku i od spodu podłużnic.
3. Przykręcić ramiona haka do podłużnic jedną śrubą M10x35 C z boku (bliżej od tyłu samochodu) i jedną od spodu B (podkładki powiększone, podkładki sprężyste)
4. Zaznaczyć i wywiercić otwóry z boku podłużnicy pod śruby w osi "1" (położone dalej od tyłu samochodu).
5. Założyć poprawnie śruby na patyku C i skręcić śrubami - do pojedyńczych śrub na patyku B stosować podkładki powiększone.
6. Dokęcić wszystkie śruby momentami wg tabeli.
7. Wyciąć w zderzaku otwór na łapki kuli od jego dolnej krawędzi
8. Zamontować belkę zderzeniową po wcześniejszym obcięciu jego małych fragmentów.
9. Zamontować zderzak.
10. Przykręcić kulę i blachę gniazda elektrycznego śrubami M12X70 (podkładki, podkładki sprężyste, nakrętki). Momenty dokręcenia wg tabeli.
11. Podłączyć instalację elektryczną wg istrukcji fabrycznej samochodu.

Fitting instructions:
(Disassemble and andercut of the bumper)

1. Disassemble the rear bumper and the collision beam.
2. Remove the hole plugs on the side and bottom of the stringers.
3. Screw the arms of the towbar to the stringers with the bolts M10x35 C (the holes closer to the rear of the car) and one from the bottom B (washers, spring washers, nuts)
4. Mark and drill the holes (in axis "1") on the side of the stringers (located farther from the back of the car).
5. Fit the screws on the stick B and C correctly and fix with screws - to the screws on the stick B use washers enlarged
6. Tighten all the bolts according to the torque setting - see the table.
7. Cut out the fragment in the bumper (in its bottom edge) - on the ball's feets.
8. Mount the collision beam after earlier cutting it small fragments.
7. Mount the bumper..
8. Fix the ball and electric plate with the bolts M12x70 . (washers, spring washers, nuts). Torque setting according to the table.
9. Connect the electric wires according to the instructions of the car.

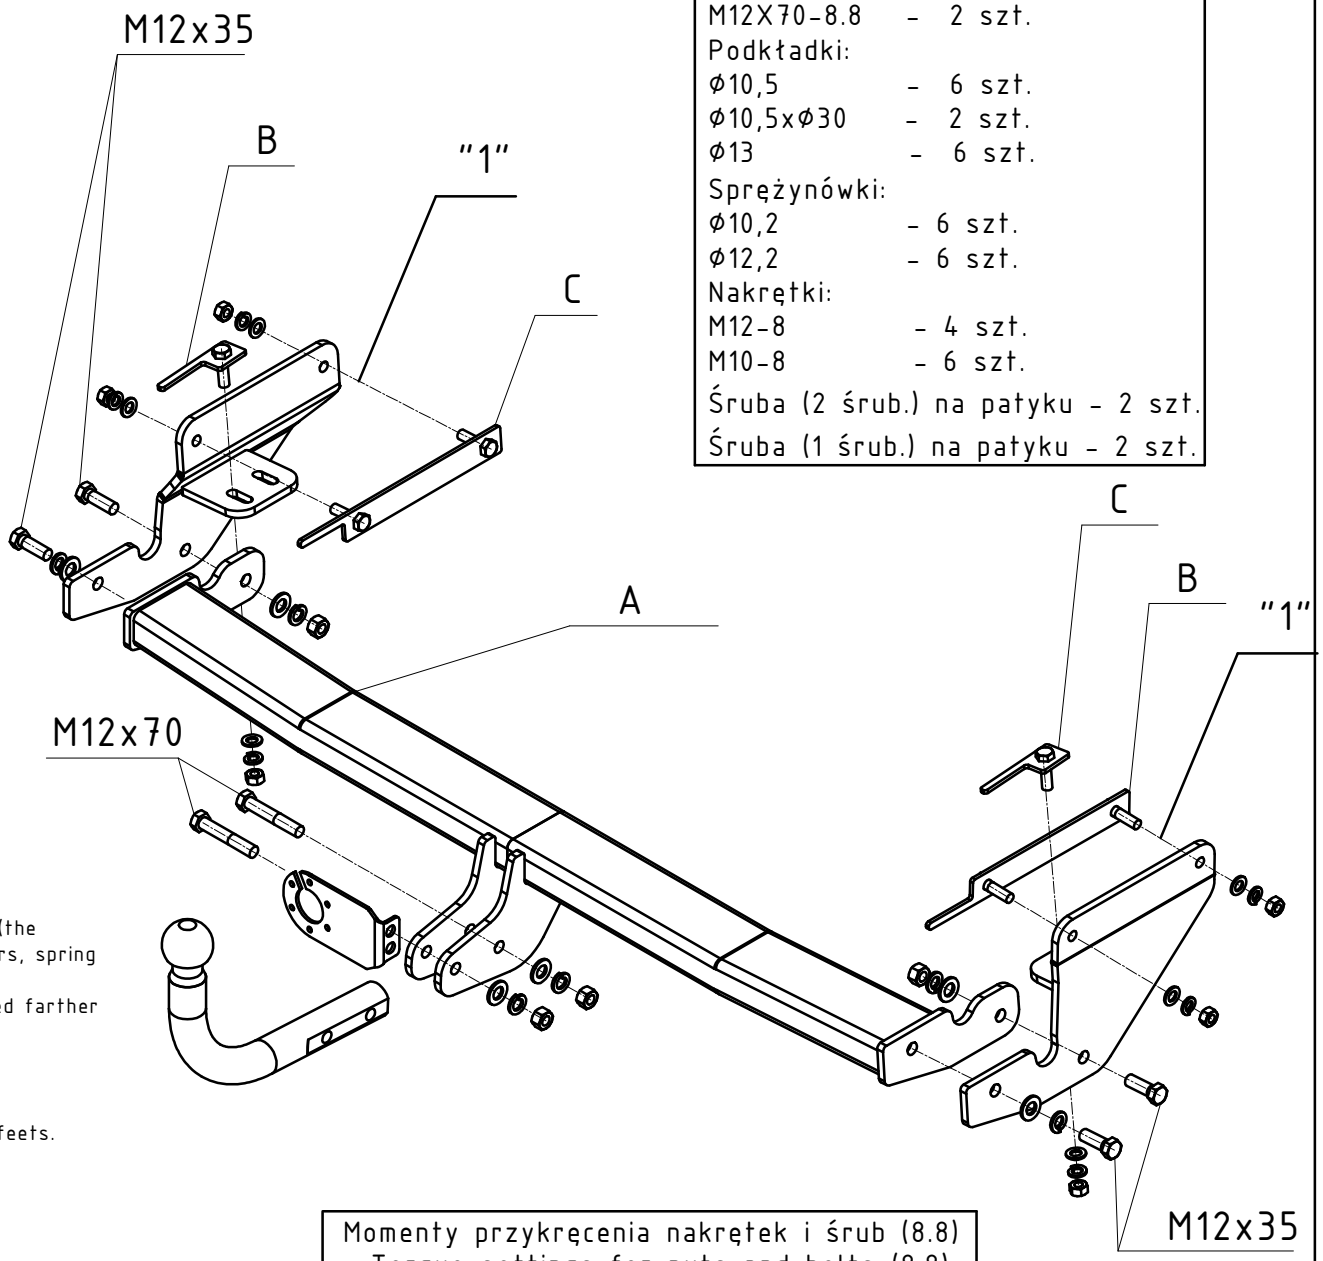

Momenty przykręcenia nakrętek i śrub (8.8)
Torque settings for nuts and bolts (8.8)
M8 - 25 Nm; M10 - 55 Nm; M12 - 85 Nm