Ford Kuga SUV, Ford Escape (USA)
Rok prod: 03.2013-06.2019
Nr kat. A07277

Zestaw śrubowy:

Śruby:

M12X70-8.8	- 2 szt.
M12x35-8.8	- 4 szt.
M10x35-8.8	- 4 szt.

Podkładki:

Ø13	- 2 szt.
Ø10,5xØ30	- 4 szt.
Ø13xØ35	- 4 szt.

Podkładki spręż.:

Ø12,2	- 6 szt.
Ø10,2	- 4 szt.


Nakrętki:

M12-8	- 6 szt.

Instrukcja montażu:

(demontaż zderzaka, bez jego podcięcia)

1. Zdemocować tylne lampy oświetlenia i zderzak.
2. Odkręcić belkę zderzeniową - nie będzie już potrzebna.
3. Wsunąć ramiona A i B do podłużnic i przykręcić śrubami M10x35 do podłużnic - w miejscu spawanych nakrętek (podkładki powiększone i podkładki spręż.) .
4. Między ramionami A i B przykręcić belkę główną C na śruby M10x35 - przechodzą też przez bok podłużnicy oraz na śruby M12x35 (podkładki powiększone i podkładki spręż.) .
5. Dokęcić wszystkie śruby momentami wg tabeli.
6. Zamontować zderzak i lampy tylne.
7. Przykręcić kulę i blachę gniazda elektrycznego śrubami M12x70 (podkładki, podkładki sprężyste, nakrętki) . Momenty dokręcenia wg tabeli.
8. Podłączyć instalację elektryczną wg istrukcji fabrycznej samochodu.

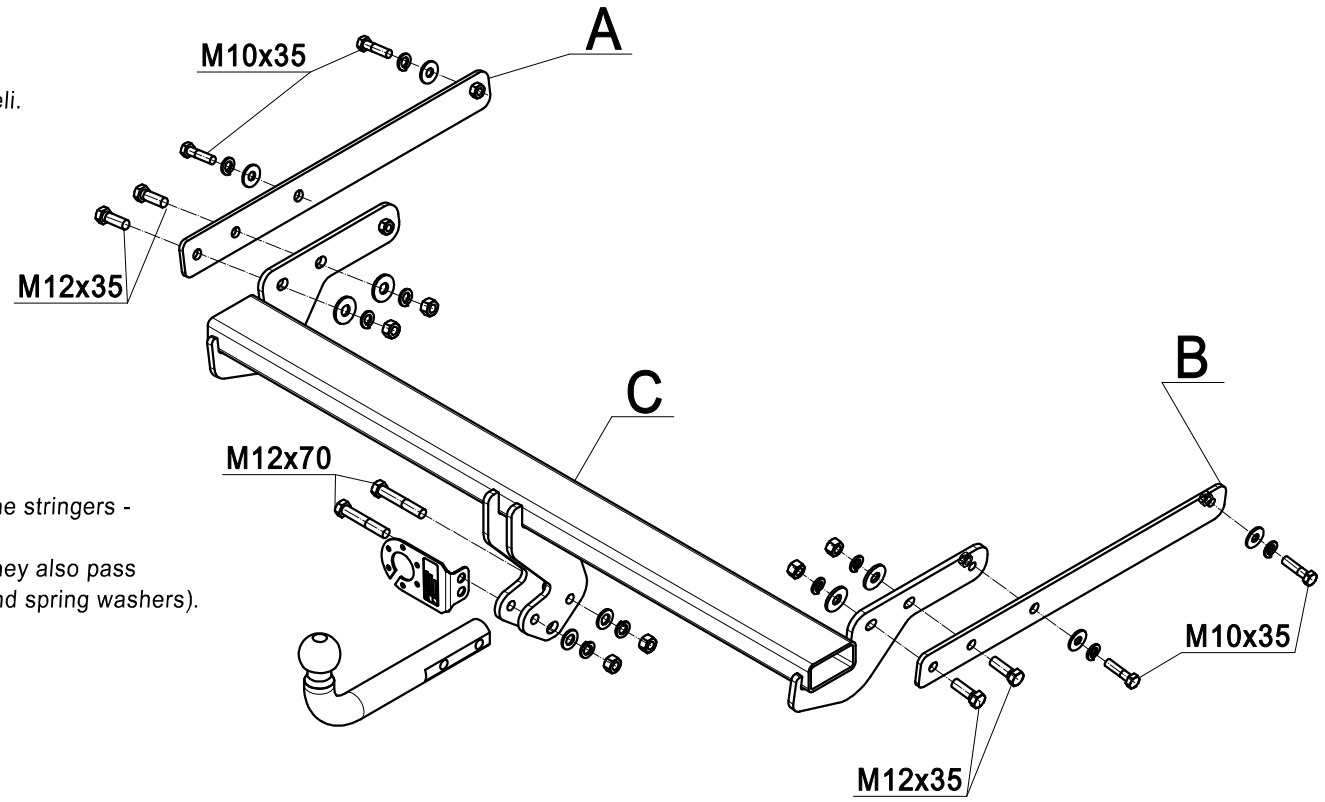

Fitting instructions:

(disassembly of the bumper, without undercut it)

1. Disassemble the rear lighting lamps and the bumper.
2. Unscrew the impact beam - it will no longer be needed.
3. Insert the arms A and B into the stringers and screw with bolts M10x35 to the stringers - in the place of welded nuts (enlarged washers and spring washers).
4. Between the arms A and B screw the main beam C on the bolts M10x35 - they also pass through the side of the stringers and for M12x35 bolts (enlarged washers and spring washers).
5. Tighten all bolts according to the table torque.
6. Reassemble the bumper and rear lamps.
7. Fix the ball and the electric plate with M12x70 screws (washers, spring washers, nuts). Tightening torques according to table.
8. Connect the electrical installation according to the car's factory instructions.

Momenty przykręcenia nakrętek i śrub (8.8)
Torque settings for nuts and bolts (8.8)
M6 - 11 Nm; M8 - 25 Nm; M10 - 55 Nm; M12 - 85 Nm

Ford Kuga SUV, Ford Escape (USA)
Rok prod: 03.2013-06.2019
Nr kat. A07277

Zestaw śrubowy:

Śruby:

M12X70-8.8	- 2 szt.
M12x35-8.8	- 4 szt.
M10x35-8.8	- 4 szt.

Podkładki:

Ø13	- 2 szt.
Ø10,5xØ30	- 4 szt.
Ø13xØ35	- 4 szt.

Podkładki spręż.:

Ø12,2	- 6 szt.
Ø10,2	- 4 szt.


Nakrętki:

M12-8	- 6 szt.

Instrukcja montażu:

(demontaż zderzaka, bez jego podcięcia)

1. Zdemocować tylne lampy oświetlenia i zderzak.
2. Odkręcić belkę zderzeniową - nie będzie już potrzebna.
3. Wsunąć ramiona A i B do podłużnic i przykręcić śrubami M10x35 do podłużnic - w miejscu spawanych nakrętek (podkładki powiększone i podkładki spręż.) .
4. Między ramionami A i B przykręcić belkę główną C na śruby M10x35 - przechodzą też przez bok podłużnicy oraz na śruby M12x35 (podkładki powiększone i podkładki spręż.) .
5. Dokęcić wszystkie śruby momentami wg tabeli.
6. Zamontować zderzak i lampy tylne.
7. Przykręcić kulę i blachę gniazda elektrycznego śrubami M12x70 (podkładki, podkładki sprężyste, nakrętki) . Momenty dokręcenia wg tabeli.
8. Podłączyć instalację elektryczną wg istrukcji fabrycznej samochodu.

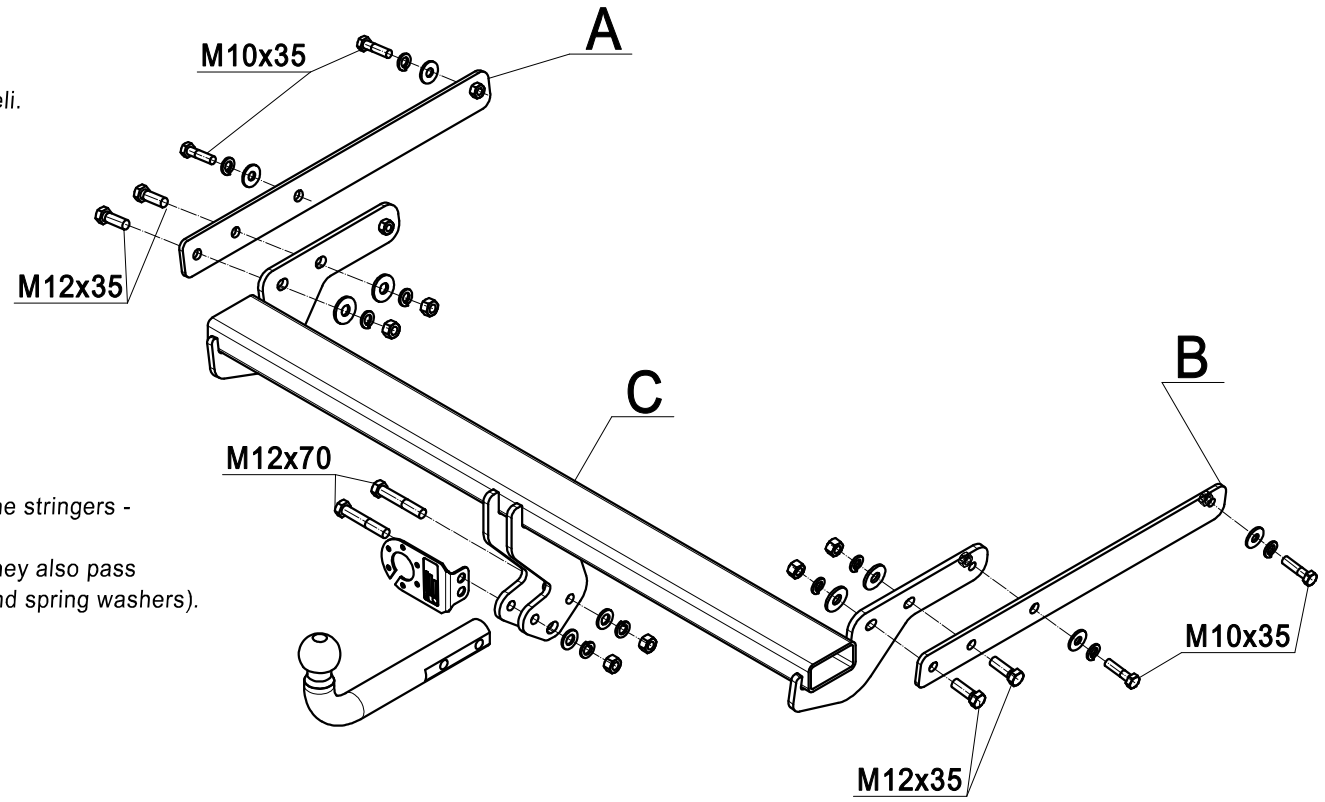

Fitting instructions:

(disassembly of the bumper, without undercut it)

1. Disassemble the rear lighting lamps and the bumper.
2. Unscrew the impact beam - it will no longer be needed.
3. Insert the arms A and B into the stringers and screw with bolts M10x35 to the stringers - in the place of welded nuts (enlarged washers and spring washers).
4. Between the arms A and B screw the main beam C on the bolts M10x35 - they also pass through the side of the stringers and for M12x35 bolts (enlarged washers and spring washers).
5. Tighten all bolts according to the table torque.
6. Reassemble the bumper and rear lamps.
7. Fix the ball and the electric plate with M12x70 screws (washers, spring washers, nuts). Tightening torques according to table.
8. Connect the electrical installation according to the car's factory instructions.

Momenty przykręcenia nakrętek i śrub (8.8)
Torque settings for nuts and bolts (8.8)
M6 - 11 Nm; M8 - 25 Nm; M10 - 55 Nm; M12 - 85 Nm