
Jeep Wrangler JK,
Rok prod: od 04.2007

ZESTAW ŚRUBOWY:
ŚRUBY:
M12x70- 8.8 - 2 szt.
M12x120-8.8 - 4 szt.
PODKŁADKI:
ϕ13 - 2 szt.
ϕ13xϕ35 - 4 szt.
PODKŁ. SPRĘŻYSTE:
ϕ12,2 - 6 szt.
NAKRĘTKI:
M12-8 - 6 szt.

Instrukcja montażu:

1. Zdemontować zderzak tylny.
2. Przyłożyć korpus haka do belki poprzecznej samochodu i przykręcić śrubami M12x120.
3. Przykręcić wszystkie śruby momentami wg tabeli.
4. Zamontować zderzak (bez podcinania) .
5. Przykręcić kulę i blachę gniazdka elektrycznego śrubami M12x70 (podkładki, podkładki spręż., nakrętki) . Momenty przykręcenia wg tabeli.
6. Podłączyć przewody elektryczne wg instrukcji.

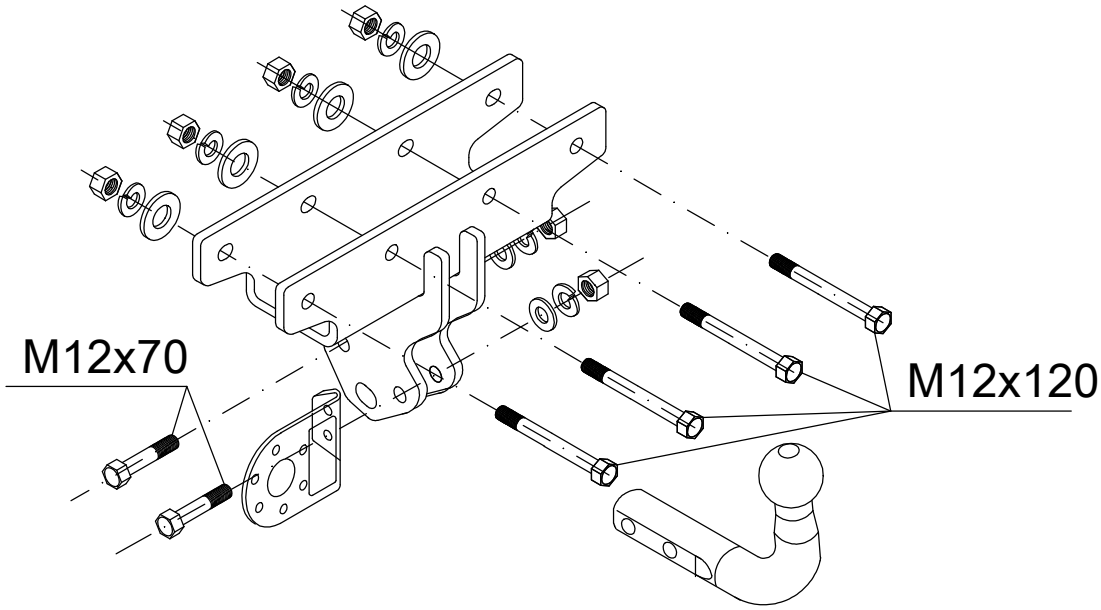

Fitting instructions:

1.Remove the rear bumper.
2. Apply the towbar body to the crossbar of the car and fix it with M12x120 screws.
3. Tighten all the bolts according to the torque settings - see the table.
4. Screw the bumper (without undercutting) .
5. Fix the ball and electric plate with the bolts M12x70 (washers, spring washers, nuts. Torque settings according to the table.
6. Connect the electric wires according to the instructions.

Moment skręcający dla śrub i nakrętek (8.8):
Torque settings for nuts and bolts (8.8)
M6 - 11Nm; M8-25Nm; M10-55Nm; M12-85Nm; M14-135Nm ; M16-195Nm.