Nissan X-Trail (T31)
Rok prod: 04.2007-06.2014

bizub

Zestaw śrubowy:

Śruby:

M12X70-8.8	- 2 szt.
M12x35-8.8	- 5 szt.
M10x45-8.8	- 4 szt.
M10x35-8.8	- 6 szt.
M8x30-8.8	- 4 szt.

Podkładki:

Ø10,5xØ30	- 10 szt.
Ø8,4xØ24	- 4 szt.
Ø13	- 7 szt.
Ø10,5	- 5 szt.

Podkładki sprężyste:

Ø12,2	- 7 szt.
Ø10,2	- 10 szt.
Ø8,2	- 4 szt.


Nakrętki:

M12-8	- 2 szt.

Instrukcja montażu:

(demontażu zderzaka i jego cięcie)

1. Zdemontować zderzak i nadkola oraz belkę zderzeniową (belka nie będzie już montowana) .
2. Zdemontować osłonę z tyłu przy podłużnicy - nie będzie już potrzebna oraz osłonę termiczną tłumnika.
3. Opuścić tłumnik.
4. Wsunąć do podłużnic ramiona A i B i przykręcić lekko śrubami M10x45 i M10x35 (podkładki powiększone, podkładki sprężyste).
5. Zamontować belkę główną C do ramion A i B śrubami M12x35 (podkładki, podkładki spręż.) .
6. Dokęcić wszystkie śruby momentami wg tabeli.
7. Wyciąć zderzak od spodu na łapki kuli.
8. Zamontować zderzak.
9. Przykręcić kulę i blachę gniazda elektrycznego śrubami M12X70 (podkładki, podkładki sprężyste, nakrętki. Momenty dokręcenia wg tabeli.
10. Podłączyć instalację elektryczną wg istrukcji fabrycznej samochodu.

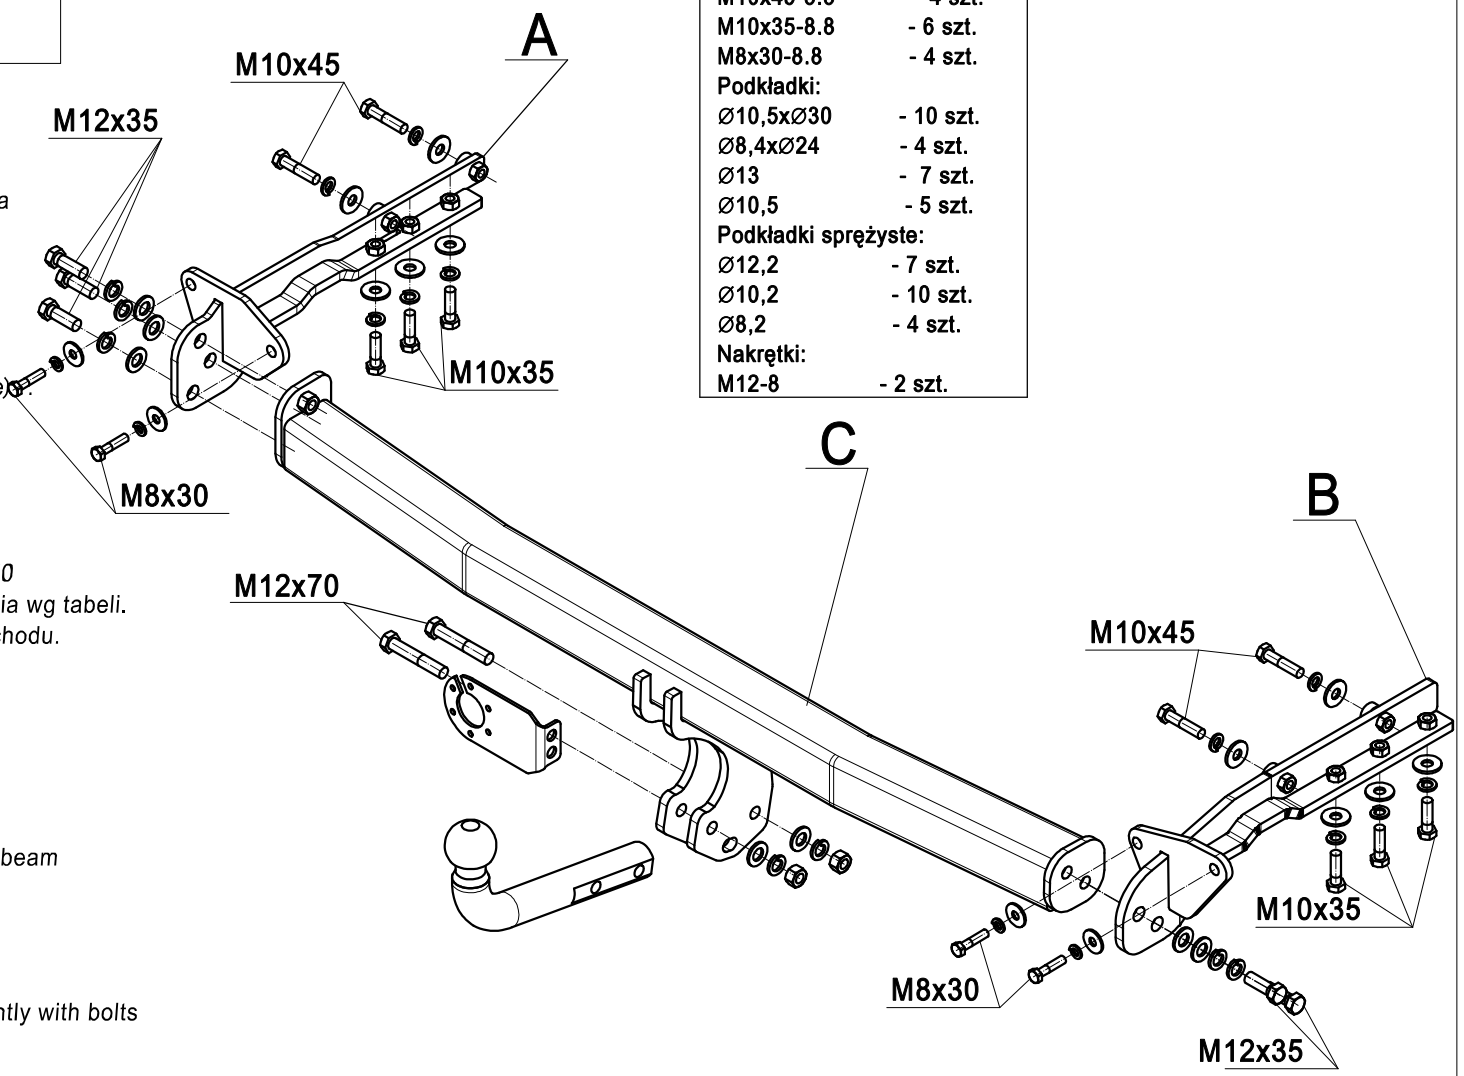

Fitting instructions:

(bumper disassembly and cutting it)

1. Disassemble the bumper, wheel arches and the impact beam (beam will no longer be mounted) .
2. Dismantle the cover at the rear by the stringer - it will not be already needed and disassemble the muffler heat shield.
3. Lower the muffler.
4. Insert the arms A and B into the stringers and tighten them slightly with bolts M10x45 and M10x35 (enlarged washers, spring washers) .
5. Fix the main beam C to the A and B arms with M12x35 bolts (washers, spring washers) .
6. Tighten all bolts according to the torque shown in the table.
7. Cut the bumper unter ball's feet from the edge of the bumper.
8. Reassemble the bumper.
9. Fix the ball and the electric plate with the bolts M12X70 (washers, spring washers, nuts. Tightening torques see table.
10. Connect the electric system according to the car factory instructions.

Momenty przykręcenia nakrętek i śrub (8.8)
Torque settings for nuts and bolts (8.8)
M6 - 11 Nm; M8 - 25 Nm; M10 - 55 Nm; M12 - 85 Nm