Subaru Legacy IV, sedan (BL)
Rok prod: 2003-2009

Zestaw śrubowy:

Śruby:

M12X70-8.8	- 2 szt.
M10x45-8.8	- 6 szt.
M6x20-8.8	- 4 szt.

Podkładki:

Ø13	- 2 szt.
Ø10,5xØ30	- 6 szt.
Ø8,5xØ24	- 4 szt.

Podkładki spręż.:


Ø12,2	- 2 szt.
Ø10,2	- 6 szt.
Ø6,2	- 4 szt.

Nakrętki:

M12-8	- 2 szt.

Instrukcja montażu:

1. Zdemocować zderzak i metalowe wzmocnienie zderzaka - zachować elementy złączne.
2. Opuścić tłumnik z ostatniego zawiesia i zdemontować osłonę termiczną.
3. Wsunąć hak (ramiona) do podłużnic i na szpilki wystające z pasa tylnego (przy podłużnicach) - otwory "1". Przykręcić na szpilki wykorzystując wcześniej odkręcone części złączne oraz na śruby M10x45 od spodu podłużnic (podkładki powiększone i podkładki spręż.) .
4. Przewiercić wgłębienia w osłonie termicznej do ~Ø22 i zamontować ją do samochodu wykorzystując śruby M6x20 (podkładki powiększone Ø8,5xØ24, podkładki sprężyste) na otwory "2".
5. Dokręcić wszystkie śruby momentami wg tabeli.
6. Zawiesić tłumnik i zderzak.
7. Przykręcić kulę i blachę gniazda elektrycznego śrubami M12x70 (podkładki, podkładki sprężyste, nakrętki) . Momenty dokręcenia wg tabeli.
8. Podłączyć instalację elektryczną wg istrukcji fabrycznej samochodu.

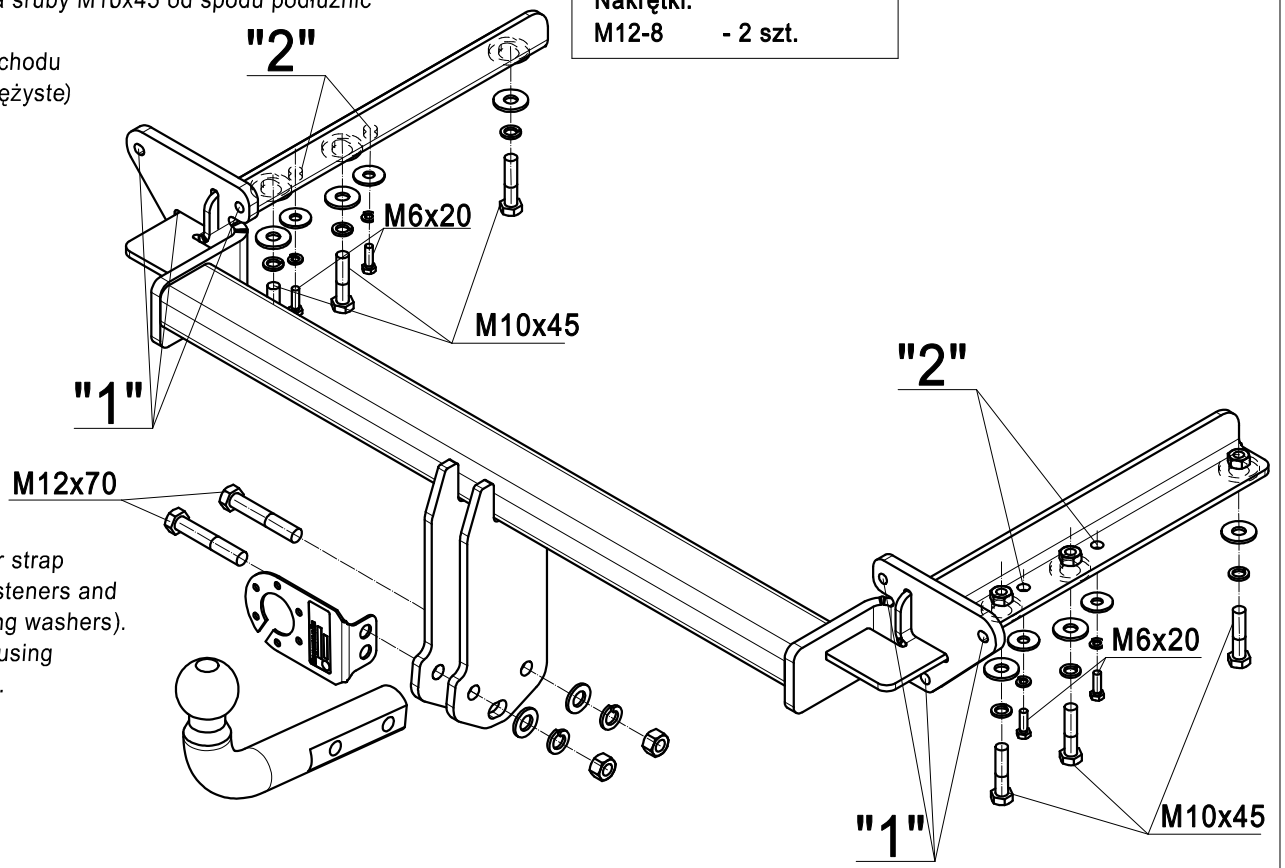

Fitting instructions:

1. Disassemble the bumper and metal bumper reinforcement - keep fasteners.
2. Lover the muffler from the last sling and disassemble the termal shield.
3. Insert the hook into the stringers (arms) and on the pins protruding from the rear strap (at the stringers) - holes "1". Screw on the studs using previously unscrewed fasteners and with the M10x45 bolts from the bottom of the stringers (enlarged washers, spring washers).
4. Drill through the recesses in the thermal shield to ~Ø22 and mount it to the car using M6x20 bolts (enlarged washers Ø8,5xØ24 and spring washers) on the holes "2".
5. Tighten all bolts according to the table torque.
6. Hang the muffler and the bumper.
7. Fix the ball and the electric plate with M12x70 screws (washers, spring washers, nuts). Tightening torques according to table.
8. Connect the electrical installation according to the car's factory instructions.

Momenty przykręcenia nakrętek i śrub (8.8)
Torque settings for nuts and bolts (8.8)
M6 - 11 Nm; M8 - 25 Nm; M10 - 55 Nm; M12 - 85 Nm